

SKI SPECIFICATIONS

INSTALLATION, MAINTENANCE, SERVICE INSTRUCTIONS & ILLUSTRATED PARTS LIST

AIRGLAS MANUAL NO. L 44000-105

FOR SKI SERIAL NO.'S 1 THRU 1000

AIRGLAS

MODEL L 44000-11 FSN 1630-912-3166
SKI ASSEMBLY, LANDING GEAR (FWD)

&

MODEL L 44000-13 FSN 1630-912-3167
SKI ASSEMBLY, LANDING GEAR (AFT)

FOR

BOEING VERTOL CH47A, B, C HELICOPTER

CODE INDENT. NO. 17564

AIRGLAS, INC. ANCHORAGE, ALASKA 99507

Airglas Model L 44000-11 & 13 Skis



Manual No. L 44000-105

Airglas, Inc.
Anchorage, Alaska 99507

Airglas Model L 44000-11 & -13 Skis

SKI SPECIFICATION

Airglas Model L 44000 for CH47A, B, C Helicopter

Floatation at 44,000 lb. Gross Weight approx. 2.25 lb. per sq. inch of ski area.

FORWARD SKI

-AIRGLAS P/N L44000-11

Dimensions -----137" x 48"
Approx area per ski -----5800 sq. inches
Max weight per ski -----225 lbs.
Area distribution -----60% ahead of axle
C.G. of ski -----9.5 inches ahead of axle

AFT SKI

-AIRGLAS P/N L 44000-13

Dimensions -----114.8" x 36"
Approx area per ski -----3700 sq. inches
Max weight per ski -----175 lbs.
Area distribution -----60% ahead of axle
C.G. of ski -----3 inches ahead of axle

CONSTRUCTION

-Main body Fiberglas Reinforced Vinyl Ester Resin
Top Finish- ISO Polyester Gel Coat
Bottom Finish- Abrasion Resistant Gel Coat coated,
with a Teflon Urethane Coating.

GENERAL DESIGN

-The ski is a fixed penetration wheel ski with wheels
penetrating six inches in the snow three inches under
load on a hard surface. A full swivel tail wheel is
spring mounted on the aft of each ski to protect the
ski during ground handling and allow the use of the
most simple type of rigging system to maintain the
flight attitude of the ski.

MAINTENANCE AND SERVICE INSTRUCTIONS

LUBRICATION:

1. Main pivot points on ski are lubricated with self-lubricating oilite Bearings and should not require any further lubrication.
2. Tail wheel swivel bushings and wheel bearings should be lubricated with appropriate type available grease at normal aircraft periodic inspections.

DAILY INSPECTION:

1. Check shock rings on forward and aft safety cables. The shock rings should have a normal service life of 12 months, but may be damaged in a very short period of time by hydraulic fluid on any petroleum base oil. Damage will be quite noticeable as diameter of shock ring will be reduced where the rubber strands have been attacked by the oil.
2. Check all hardware and safety wire for proper installation.

TOP SURFACE MAINTENANCE:

The surface of this ski has a very durable plastic coating that is not affected by gas, oil or environmental conditions. It may be brightened up with rubbing compound and wax occasionally but should not require painting. (NOTE) Small hairline check marks may appear in this coating at stress points. These do not affect the strength of the ski in any way and ARE NOT to be considered cracks as they are only in the surface coating and don't extend into the laminate.

BOTTOM SURFACE MAINTENANCE:

1. The Teflon urethane coating allows maximum sliding in all snow conditions. No wax is required. Additional coats may be applied by brush or spray when necessary.
2. When bottom surface becomes excessively scratched or worn, it may be sanded down with a small belt or disc sander and recoated with a brush application of the High Abrasion Gel coat. This is allowed to cure at room temperature and is then roughed up, and coated with Teflon urethane coating. A kit for this process is obtainable from manufacturer. SEE REPAIR APPENDIX FOR MORE INFO.

Airglas Model L44000-11 & -13 Skis

Maintenance and Service Instructions (cont.)

Types of possible damage:

a. Negligible Damage:

1. Small nicks, scratches or abraded areas in top or bottom of ski.

b. Repairable Damage:

SEE REPAIR APPENDIX FOR DETAILS

c. Damage Necessitating Replacement:

SEE REPAIR APPENDIX FOR DETAILS

SKI INSTALLATION INSTRUCTIONS

Ski Assembly Forward- Installation of

Airglas Part No. L44000-11

2 Each Required Per Aircraft

(Left and Right Forward Skis Completely Interchangeable)

1. To Install Skis: Micrometer measure and visually inspect all 8 wheel axle stubs for any areas, on the diameter, that show upset, out of roundness or raised nicks. Use a fine, finishing with a fine strip of emery cloth, to polish axles that show damage. Make a final micrometer check to make certain there are no areas that "Mic" over the axle stub diameter. Proceed with ski installation.

(A) Jack Method: Slide ski on with aft section of ski sliding under wheels until wheels are into wheel well. (PREFERRED METHOD)

1. Release all air pressure from aft struts.
2. Lock struts so they will not extend when aircraft is jacked.
3. Jack aircraft at aft fuselage jack points with small telescoping section type jack. This type is necessary to allow enough room to install ski.
4. Pivot landing gear axle 90 degrees. It will be necessary to release centering lock pin to do this. Slide ski on with aft section of ski sliding under wheels until wheels are into wheel well.

(B) Roll-on-Method: Remove tail wheels from skis-set skis ahead of wheels and hold in place while towing aircraft forward with the wheels rolling up thru the aft channel of the ski into the wheel well. (ALTERNATE METHOD)

Caution: The ski structure must be supported when using the roll-on method. The gaps in the aft portion of the wheel well and the aft edge of the ski, should be supported with wood or similar material. Failure to support the gaps could cause damage to the ski structure.

NOTE: A thin coating of low temperature lubriplate grease must be spread on outside diameter, including thread area, of all ski axles just prior to inserting axles into ski bushings. Avoid dirt contamination.

Lift ski into position and slide ski axles No. L44000-11-3 inboard and outboard thru their axle bushings No. L44000-11-4 molded in ski and on into the stubs on the inboard and outboard end of the axle on the main landing gear of the aircraft. These ski axles can be slid in from both sides of the ski far enough to hold the ski up in position and then screwed in until the bottom on axle stubs on the landing gear and back off to the nearest lock pin hole and lock in place with a AN3-27A bolt, AN960-10 washer and a AN365-1032 nut.

2. Attach swivel fitting L44000-11-5 to forward unused forward landing gear upper scissor pivot point with 2 each L44000-11-6 end fittings. Securing with thru bolt AN3-44, AN960-10 washer and AN365-1032 nut. (To install the long AN3-44 bolt, it will be necessary to jack the aircraft by the forward fuselage jack point high enough so the upper landing gear scissor point is above the tire allowing the long AN3-44 bolt to be slid into place. If a jack is not available, this also may be accomplished by blowing up the main landing gear shock struts to this same height.

Airglas Model L 44000-11 Ski

Ski Assembly Forward – Installation of: Cont.

3. Install spring cylinder Part No. L44000-17 with the large end to swivel fitting L44000-11-5 with AN26-23 clevis bolt, AN960-616 washer and AN320-6 nut and cotter key. Then attach small end to AN47-14 eye bolt in forward top surface of ski with bushing L44000-17-10, AN25-15 and AN320-5 nut and cotter key.
4. Remove tie down ring on side of landing gear and slip the steel rings on the top end of the safety cable and shock ring assembly L44000-11-8
(NOTE: The L44000-11HD uses a double bungee safety cable assembly P/N L44000-11-8HD) and check cable assembly L44000-11-7 over the tie down ring in their respective forward and aft positions, then reinstall the tie down ring in its original position and safety. Next, secure the attach tab on the lower end of the check cable assembly L44000-11-7 to forward tail wheel spring retaining bolt EB616-21 with AN363C616 nut. **(NOTE: The L44000-11HD uses a spring retaining bolt EB616-24 with a AN363C616 nut)** The lower end of the safety cable and shock ring assembly L44000-11-8 may now be secured to the hole provided in the ski tip with AN5-7A bolt, AN365-524 nut and washer. **(NOTE: The L44000-11-8HD safety cable which was not installed by the manufacturer, i.e. a modification of a L44000-11 to a L44000-11HD, will require a AN970-5 washer to be installed under an AN-5-10 bolt, and secured using a AN365-524 nut)** (It will be necessary to stretch the shock ring considerably to install the Safety cable to the ski). One method includes positioning a piece of aerospace ground equipment in line with attachment hole and using a ratcheting strap to stretch the bungee enough to allow for easy installation of attachment tab. An alternate method uses a clamp device that is attached to tip of ski, with a method to use a ratcheting strap, to allow for stretching of safety cable.

Ski Assembly Aft – Installation of
Airglas Part No. L44000-13
2 Each Required Per Aircraft
(Left and Right Aft Skis Completely Interchangeable)

1. To Install Skis: Micrometer Measure and visually inspect all 8 wheel axle stubs for any areas, on the diameter, that show upset, out of roundness or raised nicks. Use a fine file, finishing with a fine strip of emery cloth, to polish axles that show damage. Make a final micrometer check to make certain there are no areas that “Mic” over the major axle stub diameter. Proceed with ski installation.

(A) Jack Method: (PREFERRED METHOD)

- (1) Release all air pressure from aft struts.
- (2) Lock struts so they will not extend when aircraft is jacked.
- (3) Jack aircraft at aft fuselage jack points with small telescoping section type jack. This type is necessary to allow enough room to install ski.
- (4) Pivot landing gear axle 90 degrees. It will be necessary to release centering lock pin to do this. Slide ski on with aft section of ski sliding under wheels until wheels are into wheel well.

(B) Roll-on-Method: (ALTERNATE METHOD)

- (1.) Remove tail wheels from ski- set skis ahead of wheels and hold in place while towing aircraft forward with wheels rolling up thru the aft channel of the ski into the wheel well.

Caution: The ski structure must be supported when using the roll-on method. The gaps in the aft portion of the wheel well and the aft edge of the ski, should be supported with wood or similar material. Failure to support the gaps could cause damage to the ski structure.

Note: A thin coating of low temperature lubriplate grease must be spread on outside diameter, including thread area, of all ski axles just prior to inserting axles into ski bushings. Avoid dirt contamination.

Lift ski into position and slide ski axles No. L44000-13-2 outboard and L44000-13-3 inboard thru their respective axle bushings No. L44000-11-4 molded in ski and into the stubs on the inboard and outboard end of the aft landing gear of the aircraft. These ski axles can be slid in from both sides of the ski far enough to hold ski up in position and then screwed in until they bottom on axle stubs on the landing gear and back off to nearest lock pin hole and lock in place with AN380-6-12 cotter pin.

Airglas Model L 44000-13 Ski

Ski Assembly Aft – Installation of: Cont.

2. Attach aft spring cylinder upper mounting bracket L44000-13-4 to aft side of aft landing gear leg by removing AN6 bolt that runs forward and aft thru gear leg about 11” up from CL of axle. Installing special AN47 eye bolt with head facing forward and retaining bracket L44000-13-4 in place on thread end of eye bolt with AN960-616L washer and H20-6 nut.
3. Attach upper end of safety cable and shock ring assembly L44000-13-6 to eye of special AN47 eye bolt installed in landing gear leg with AN26-12 clevis bolt, AN960-616 washer, AN320-6 nut and cotter pin. The lower end of the safety cable and shock ring assembly L44000-13-6 may now be secured to the hole provided in the inboard edge of the ski about 18” from the tip with AN5-7A bolt, AN960-516 washer and AN365-524 nut. (It will be necessary to stretch the shock ring considerable to do this.)
4. Install spring cylinder No. L44000-19 with Top(large end) to L44000-13-4 bracket assembly previously installed on aft side of aft landing gear, with AN26-21 clevis bolt, AN960-616L washer, AN320-6 nut and cotter pin. Then attach lower end of cylinder to L44000-13-5 bracket assembly on ski with AN26-21 clevis bolt, AN960-616 washer, AN320-6 nut and cotter pin. Now attach the rear check P/N L44000-13-7 to the inboard upper hole in the aft spring cylinder mounting bracket P/N L44000-13-4 with AN395-17 clevis pin and cotter pin. Next, secure the attach tab on the lower end of check cable assembly. L44000-13-7 to forward tail wheel spring retaining bolt EB616-20 with AN363C616 nut.
5. (Jack Method) Lower and remove jacks so ski tips may be pushed around into their normal position. Remove locks on struts and service. Aft ski installation is not complete.

Airglas Model L44000-11 Ski

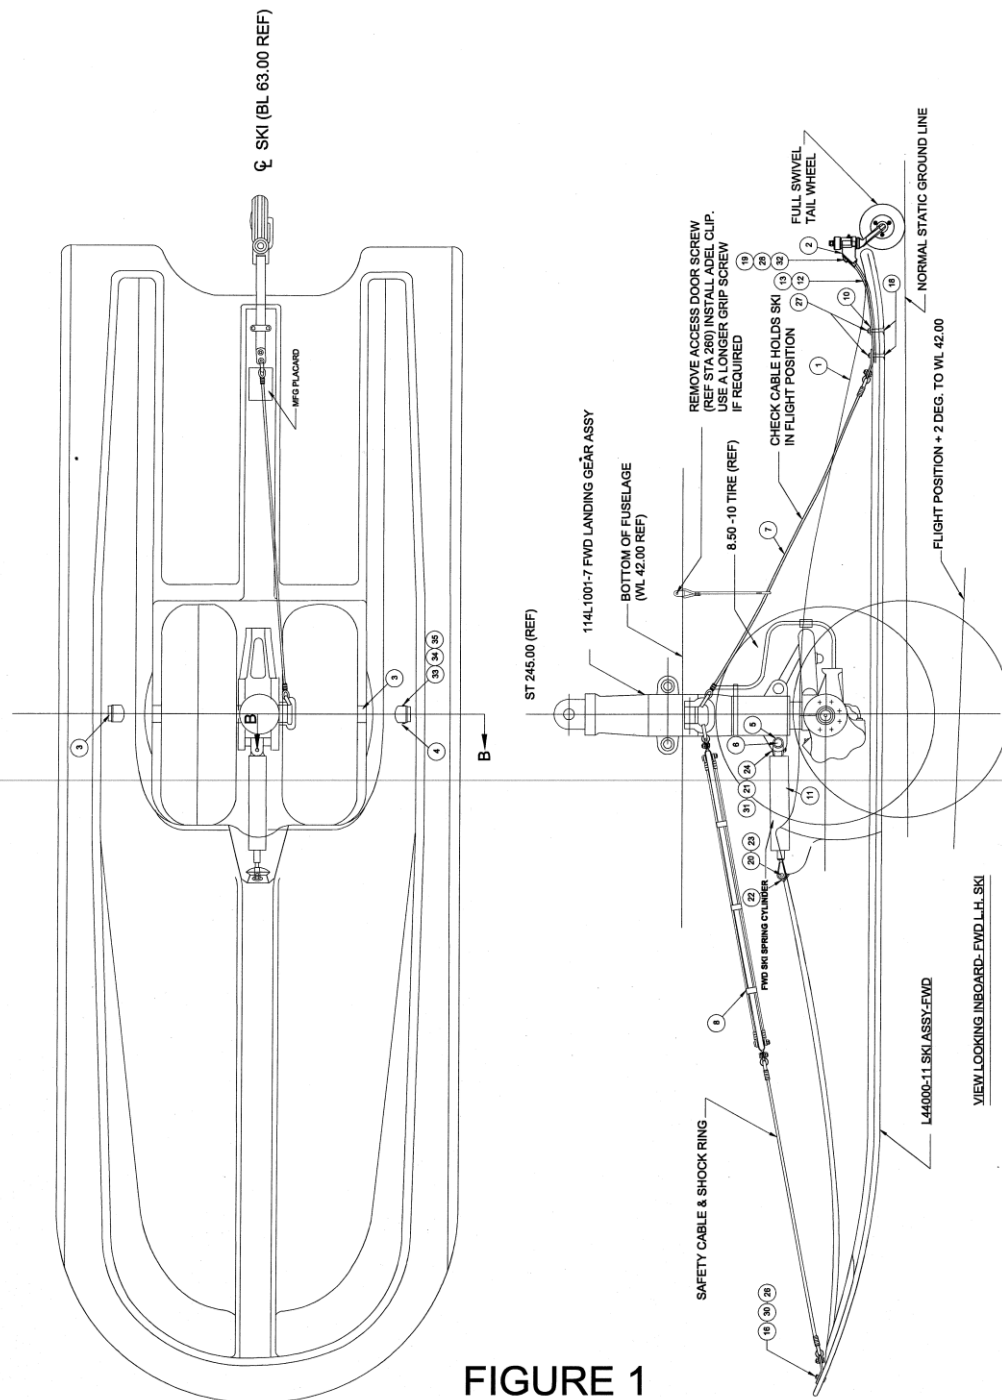


FIGURE 1

Airglas Model L44000-11 Ski

Fig. No. 1

Index Number	Part Number	Code Indent. No.	Nomenclature	Number Required
1	L44000-2	17564	Basic Fwd. Ski Molding-----	1
2	L44000-D501A	"	Swivel Tail Wheel Assy-----	1
3	L44000-11-3	"	Ski Axle Assy-----	2
4	L44000-11-4	"	Ski Axle Bushing Molded into L44000-2-----	2
5	L44000-11-5	"	Swivel Fitting-----	1
6	L44000-11-6	"	End Fitting-----	2
7	L44000-11-7	"	Check Cable Assy. Fwd. Ski--	1
8	L44000-11-8	"	Safety Cable-----	1
9				
10	L44000-11-10	"	Tab-----	1
11	L44000-17	"	Fwd. Spring Cylinder-----	1
12	30512-02	77294	Leaf Spring-----	1
13	30512-04	"	Leaf Spring-----	1
14				
15	AN3-44A		Bolt-----	1
16	AN5-7A		Bolt-----	1
17				
18	EB616-21	17564	Bolt-----	3
19	AN7-13A		Bolt-----	1
20	AN25-15		Clevis Bolt-----	1
21	AN26-23		Clevis Bolt-----	1
22	AN47-14		Eye Bolt-----	1
23	AN320-5		Nut-----	1
24	AN320-6		Nut-----	1
25	AN365-1032		Nut-----	1
26	AN365-524		Nut-----	1
27	AN363C-616		Nut-----	2
28	AN365-720		Nut-----	1
29	AN960-10		Washer-----	2
30	AN960-516		Washer-----	1
31	AN960-616L		Washer-----	2
32	AN960-716		Washer-----	1
33	AN3-27A		Bolt	2
34	AN365-1032		Nut	2
35	AN960-10		Washer	2

Airglas Model L44000-13 Ski

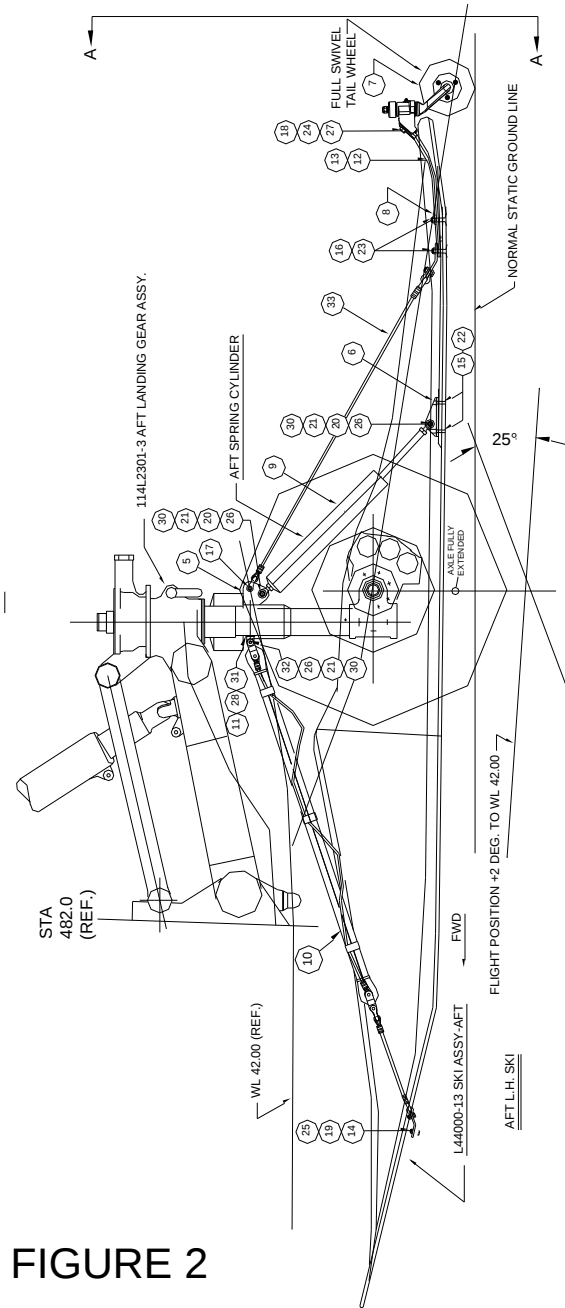
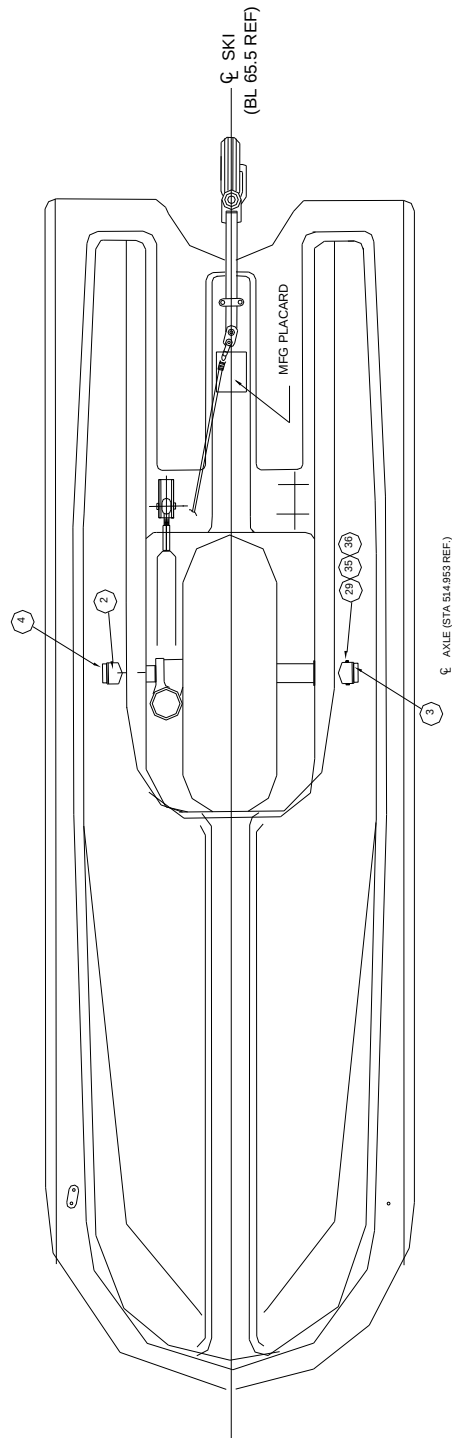


FIGURE 2

Airglas Model L44000-13 Ski

Fig.No.2 Index Number	Part Number	Code Indent. No.	Nomenclature	Number Required
1	L44000-4	17564	Basic Ski Molding-----	1
2	L44000-11-4	“	Ski Axle Bushing Molded into L44000-4 -----	2
3	L44000-13-2	“	Outboard Axle Assy-----	1
4	L44000-13-3	“	Inboard Axle Assy-----	1
5	L44000-13-4	“	Upper Spring Cylinder Mtg. Bracket-----	1
6	L44000-13-5	“	Lower Spring Cylinder Mtg. Bracket-----	1
7	L44000-3-2B	“	Swivel Tail Wheel Assy-----	1
8	L44000-11-10	“	Tab-----	2
9	L44000-19	“	Spring Cylinder-----	1
10	L44000-13-6	“	Safety Cable and Shock Ring Assy-----	1
11	AN47SPL	“	Eye Bolt-----	1
12	30512-02	77294	Leaf Spring-----	1
13	30512-04	“	Leaf Spring-----	1
14	AN5-7A	“	Bolt-----	1
15	AN4-14A	“	Bolt-----	2
16	EB616-20	17564	Bolt-----	3
17	AN395-17		Clevis Pin-----	1
18	AN7-15A		Bolt-----	1
19	AN365-534		Nut-----	1
20	AN26-21		Clevis Bolt-----	2
21	AN320-6		Nut-----	3
22	AN365-428		Nut-----	2
23	AN363C-616		Nut-----	3
24	AN365-720		Nut-----	1
25	AN960-516		Washer-----	1
26	AN960-616L		Washer-----	5
27	AN960-716		Washer-----	1
28	AN960-616		Washer-----	1
29	AN3-27A		Bolt	2
30	AN380-3-2		Cotter Pin-----	3
31	H20-6		Nut-----	1
32	AN26-12		Clevis Bolt-----	1
33	L44000-13-7	17564	Check Cable Assy-----	1
34	L44000-13-8	“	Spacer-----	1
35	AN365-1032		Nut	2
36	AN960-10		Washer	2

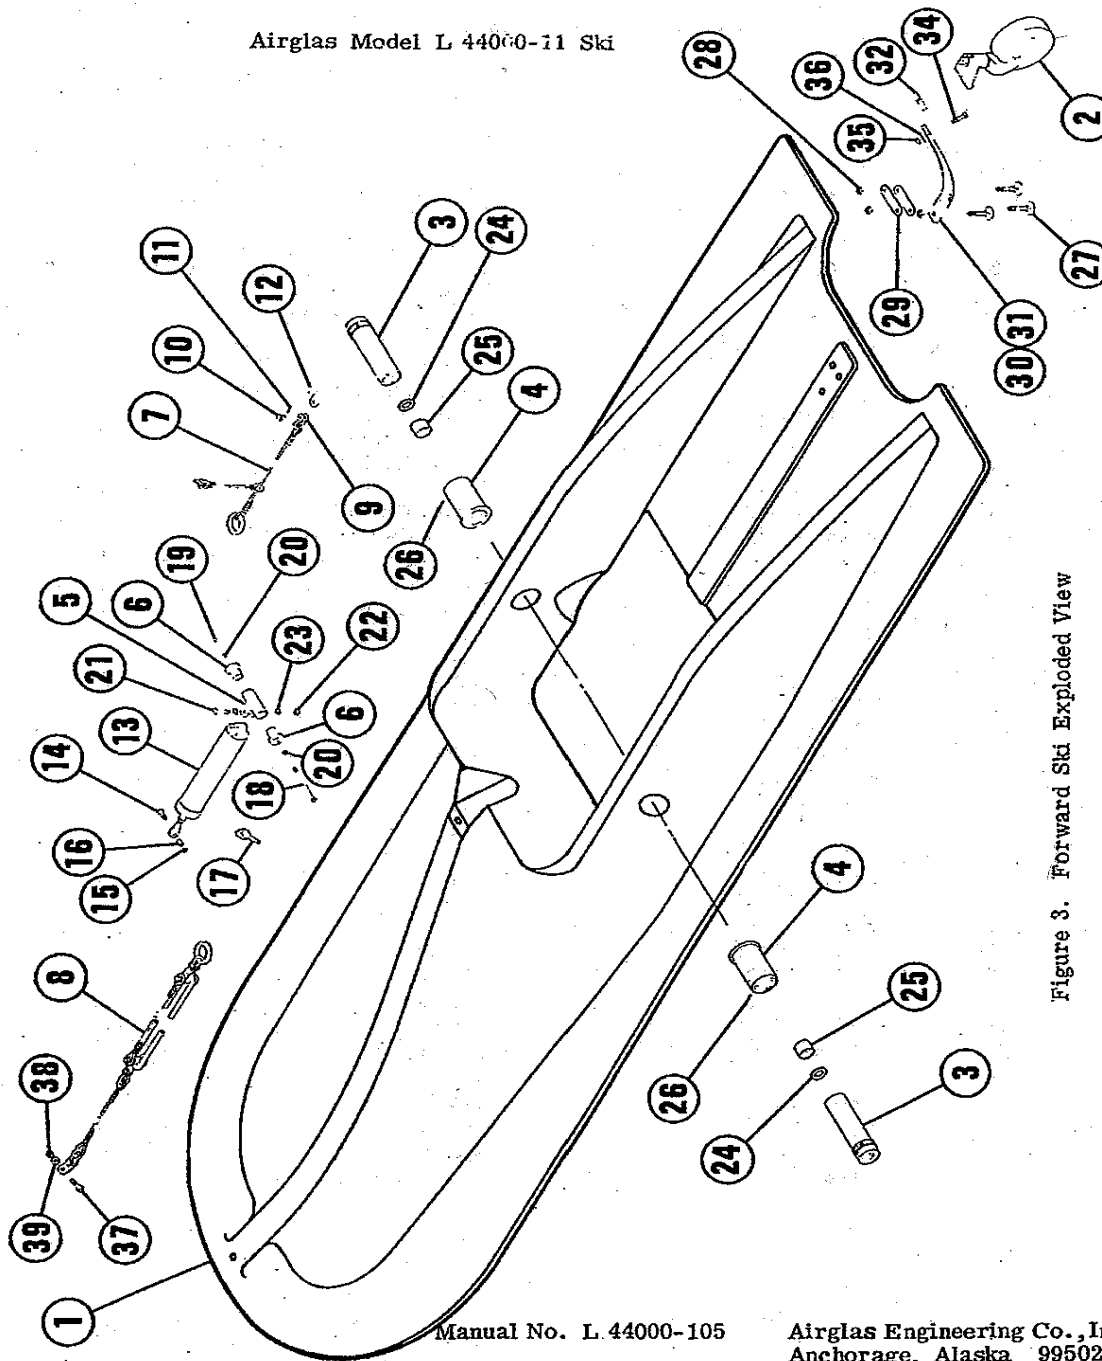


Fig.No.3

Index Number	Part Number	Code Indent. No.	Nomenclature	Number Required
1	L44000-2	17564	Basic Fwd. Ski Molding-----	1
2	L44000-3-24B	“	Swivel Tail Wheel Assy-----	1
3	L44000-11-3	“	Ski Axle Assy-----	2
4	L44000-11-4	“	Ski Axle Bushing Molded into L44000-2-----	2
5	L44000-11-5	“	Swivel Fitting-----	1
6	L44000-11-6	“	End Fitting-----	2
7	L44000-11-7	“	Check Cable Assy Fwd. Ski-----	1
8	L44000-11-8	“	Safety Cable-----	1
	L44000-11-8HD		Safety Cable—(L44000-11HD SKI) ---	1
9	AN115-46		Shackle-----	1
10	AN395-17		Clevis Pin-----	1
11	AN380-3-2		Cotter Pin-----	1
12	L44000-11-7-1	“	Tab-----	1
13	L44000-17	“	Fwd. Spring Cylinder-----	1
14	AN25-15		Bolt-----	1
15	AN320-5		Nut-----	1
16	L44000-17-10	“	Bushing-----	1
17	AN47-14		Eye Bolt-----	1
18	AN3-44A		Bolt-----	1
19	AN365-1032		Nut-----	1
20	AN960-10		Washer-----	2
21	AN26-23		Clevis Bolt-----	1
22	AN320-6		Nut-----	1
23	AN960-616L		Washer-----	2
24	T-1503	70417	Thrust Washer-----	2
25	L44000-11-3-2	17564	Bearing-----	2
26	AN380-6-12		Cotter Key-----	2
27	EB616-21	“	Bolt-----	3
	EB616-24	“	Bolt---(L44000-11HD SKI)-----	3
28	AN363C-616		Nut-----	3
29	L44000-11-10	“	Tab-----	2
30A	30512-04 or (L20500-D501A-6)	17564	Modified Leaf Spring (L44000-11HD)	1 (Rev B)
30	30512-02 or (L20500-D501A-5)	77294	Leaf Spring-----	1
31	30512-04 or (L20500-D501A-6)	“	Leaf Spring-----	1 (Rev B)
32	1478	53655	Spacer Assy-----	1
33	AN7-13A		Bolt-----	1
34	AN365-720		Nut-----	1
35	AN960-716		Washer-----	1
36	AN5-7A		Bolt-----	1
37	AN365-524		Nut-----	1
38	AN960-516		Washer-----	1

Airglas Model No. L44000-11 Ski

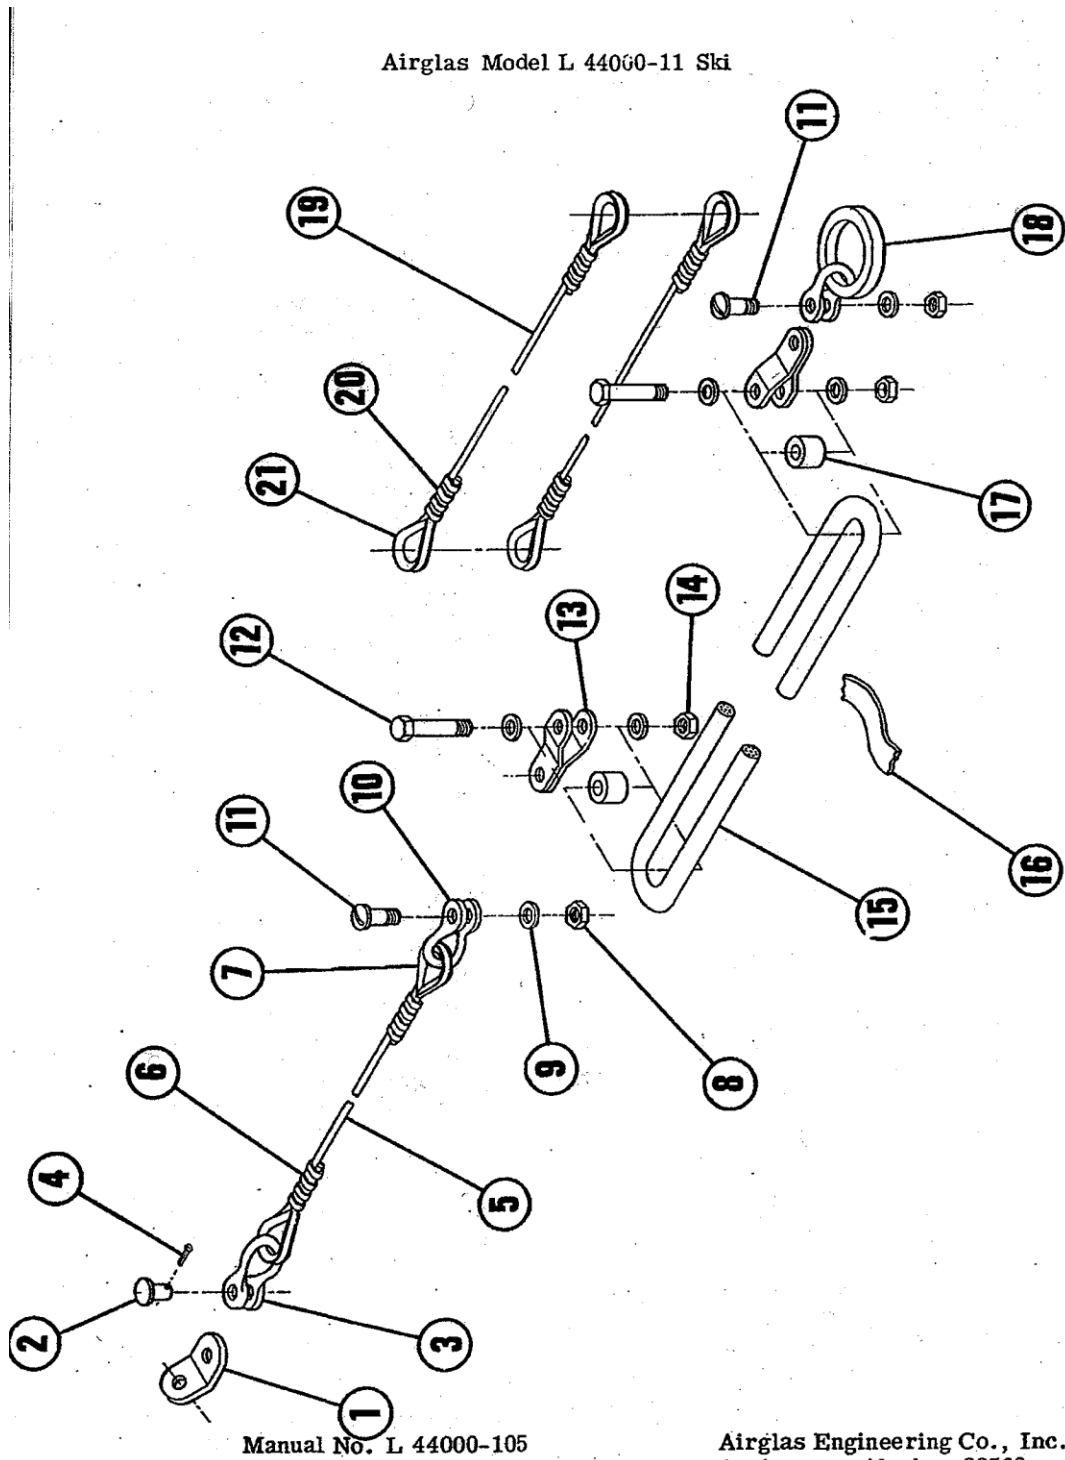


Figure 4 P/N L 44000-11-8 Safety Cable & Shock Ring Assy - Exploded View

Airglas Model L44000-11 Ski

Fig.No.4

Index Number	Part Number	Code Indent.No.	Nomenclature	Number Required
1	L44000-11-8-5	17564	Attach Tab-----	1
2	AN395-17		Clevis Pin-----	1
3	AN115-46		Shackle-----	1
4	AN380-3-2		Cotter Pin-----	3
5	L44000-11-8-2	“	Cable-----	1
6	18-6-X	76691	Nicopress Sleeve-----	2
7	AN100-6		Thimble-----	2
8	AN364-624		Nut-----	2
9	AN960-616L		Washer-----	6
10	AN115-61		Shackle-----	2
11	AN26-15		Clevis Bolt-----	2
12	AN6-16		Bolt-----	2
13	L44000-11-8-6	17564	Attach Tab-----	4
14	AN310-6		Nut-----	2
15	8020	52504	Shock Ring-----	1
16			Tape-----	
17	L44000-11-8-1	17564	Tube-----	2
18	L44000-11-8-3	“	Ring-----	1
19	L44000-11-8-4	“	Cable-----	2
20	18-4-P	76691	Nicopress Sleeve-----	4
21	AN100-5		Thimble-----	4

Airglas
Model L44000-11 Ski

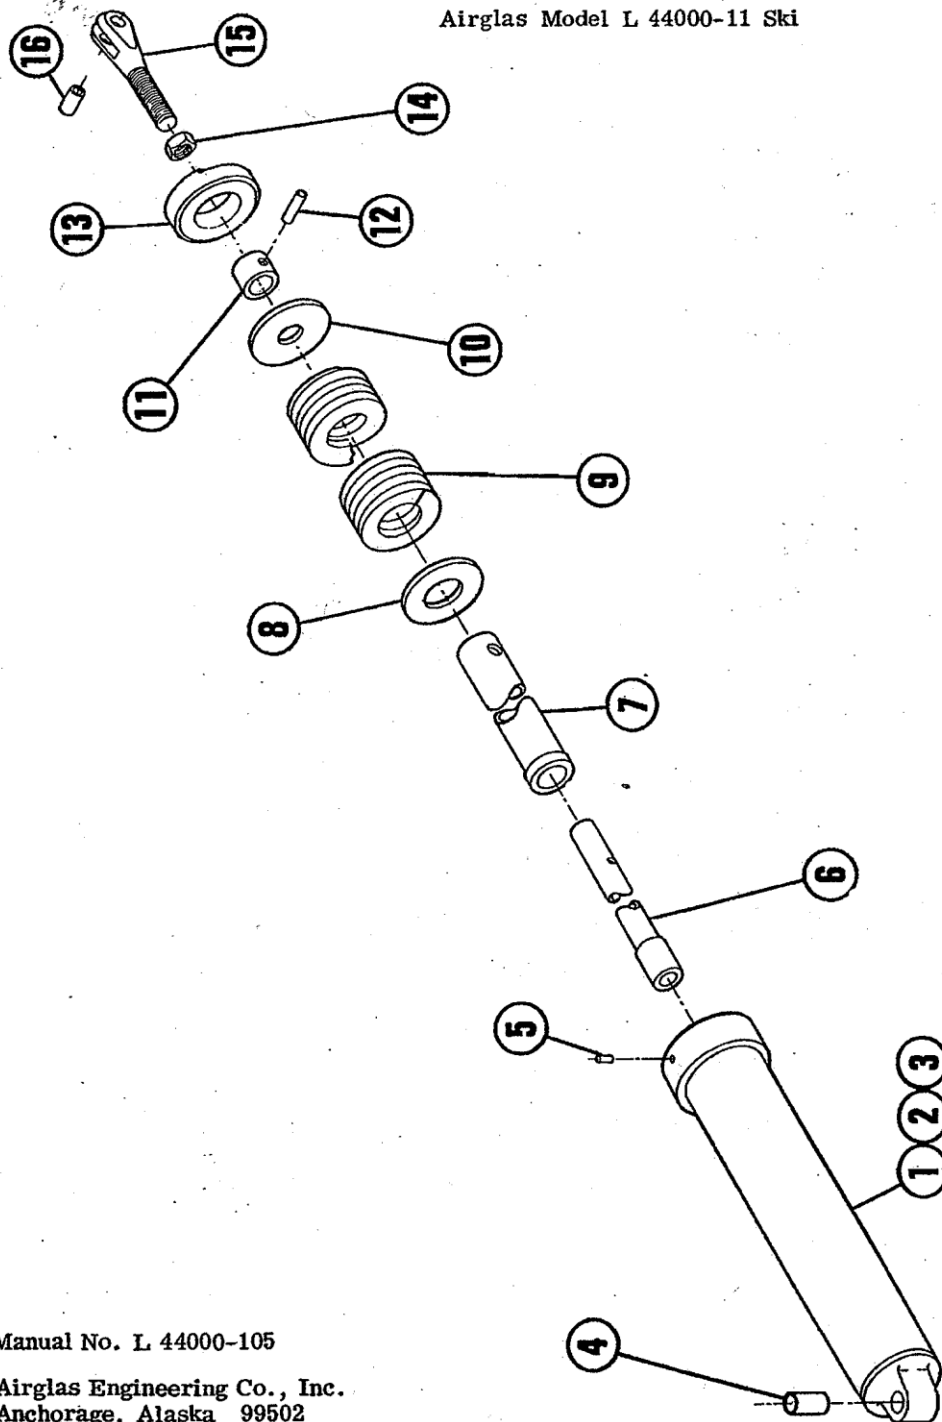


Figure No. 5. P/N L 44000-17 Spring Cylinder Assy. Fwd. - Exploded View

Manual No. L 44000-105

Airglas Engineering Co., Inc.
Anchorage, Alaska 99502

Airglas Model L44000-11 Ski

Fig.No.5 Index Number	Part Number	Code Indent.No.	Nomenclature	Number Required
1	L44000-17-1	17564	Tube-----	1
2	L44000-17-11	“	Fitting-Cylinder End-----	1
3	L44000-17-8	“	Tube-----	1
4	AA-507-3	70417	Bearing-----	1
5	MS171522		Spring Pin-----	1
6	L44000-17-3	17564	Tube-----	1
7	L44000-17-2	“	Tube-----	1
8	L44000-17-4	“	Washer-----	1
9	R-82	06170	Spring-----	1
10	L44000-17-6	17564	Washer-----	1
11	L44000-17-7	“	Tube-----	1
12	MS171652		Spring Pin-----	1
13	L44000-17-9	“	Nut-----	1
14	AN315-7		Nut-----	1
15	L44000-17-12	“	Fork Assembly-----	1
16	L44000-17-10	“	Bushing-----	1

Airglas Model L44000-11 Ski

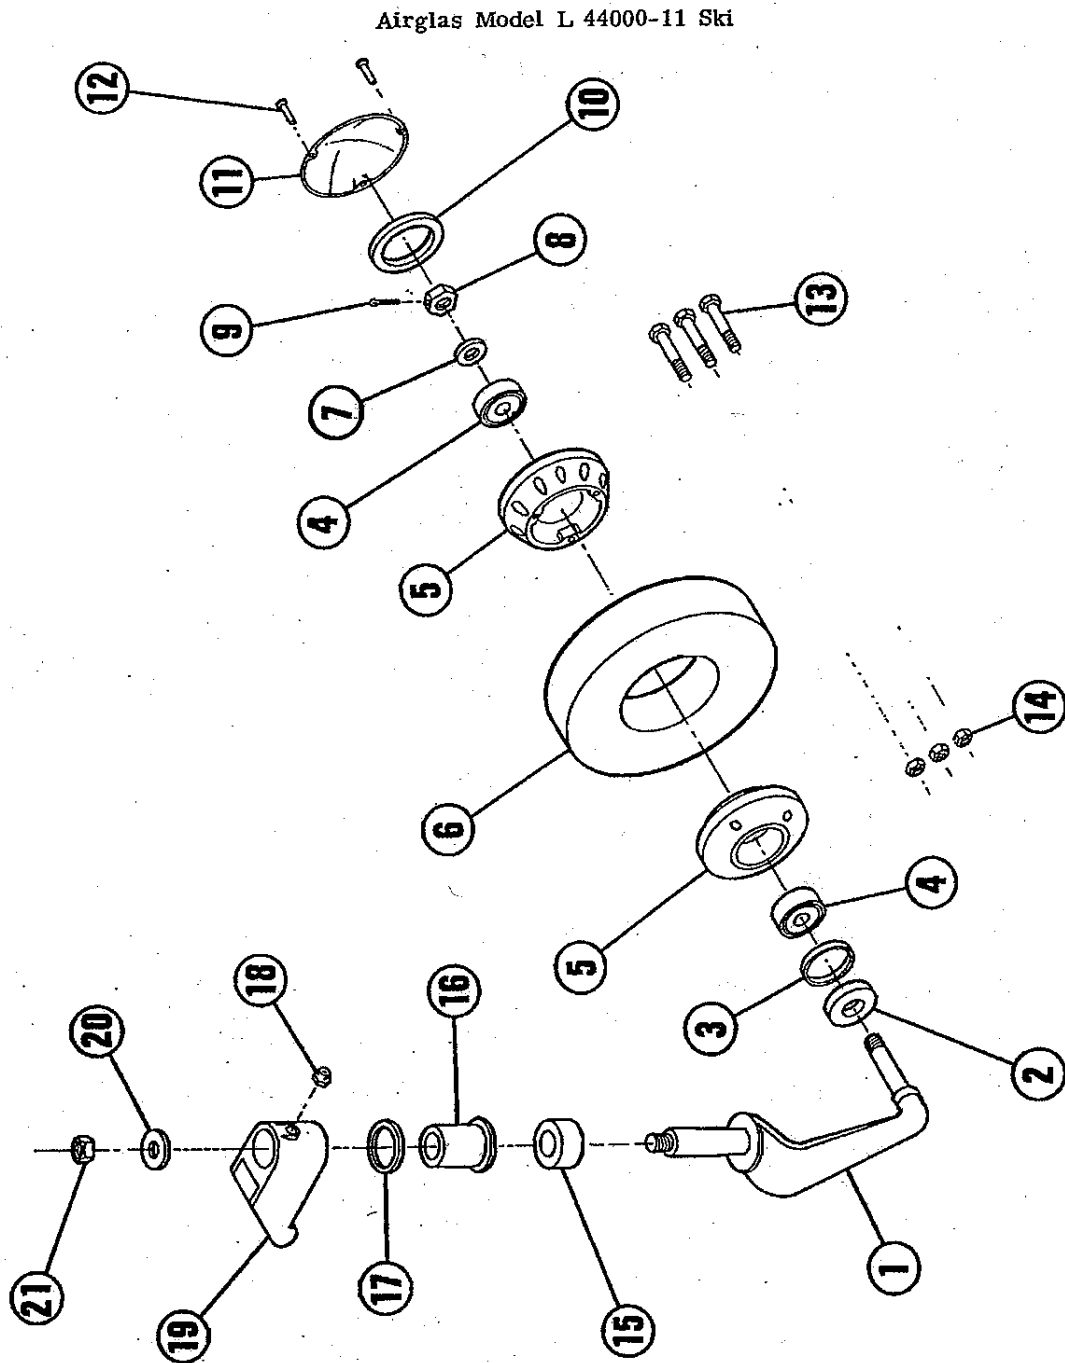


Figure No. 6. P/N L 44000-3-24B Swivel Tail Wheel Assy - Exploded View

Manual No. L 44000-105

Airglas Engineering Co., Inc.
Anchorage, Alaska 99502

Airglas Model L44000-11 Ski

Fig.No.6 Index Number	Part Number	Code Indent.No	Nomenclature	Number Required
1	2078	53655	Fork-----	1
2	1863	“	Grease Retainer-----	1
3	1862	“	Spacer-Grease Retainer-----	1
4	1883	“	Bearing Set-----	2
5	1967	“	Hub Kit-----	2
6	1879	“	Tire-----	1
7	18108	“	Washer-----	1
8	18450	“	Nut-----	1
9	18482	“	Cotter Pin-----	1
10	2035	“	Grease Retainer-----	1
11	1842	“	Cap-Hub-----	1
12	18375	“	Screw-----	3
13	19628	“	Bolt-----	3
14	13293	“	Nut-----	3
15	L44000-3-24B-1	17564	Spacer-----	1
16	1800	53665	Bushing-----	1
17	1781	“	Cap-Bushing-----	1
18	1641	“	Fitting-Grease-----	1
19	2077	“	Bracket Assembly-----	1
20	2346	“	Washer-----	1
21	18470	“	Nut, Self Locking-----	1

Airglas Model L 44000-13 Ski

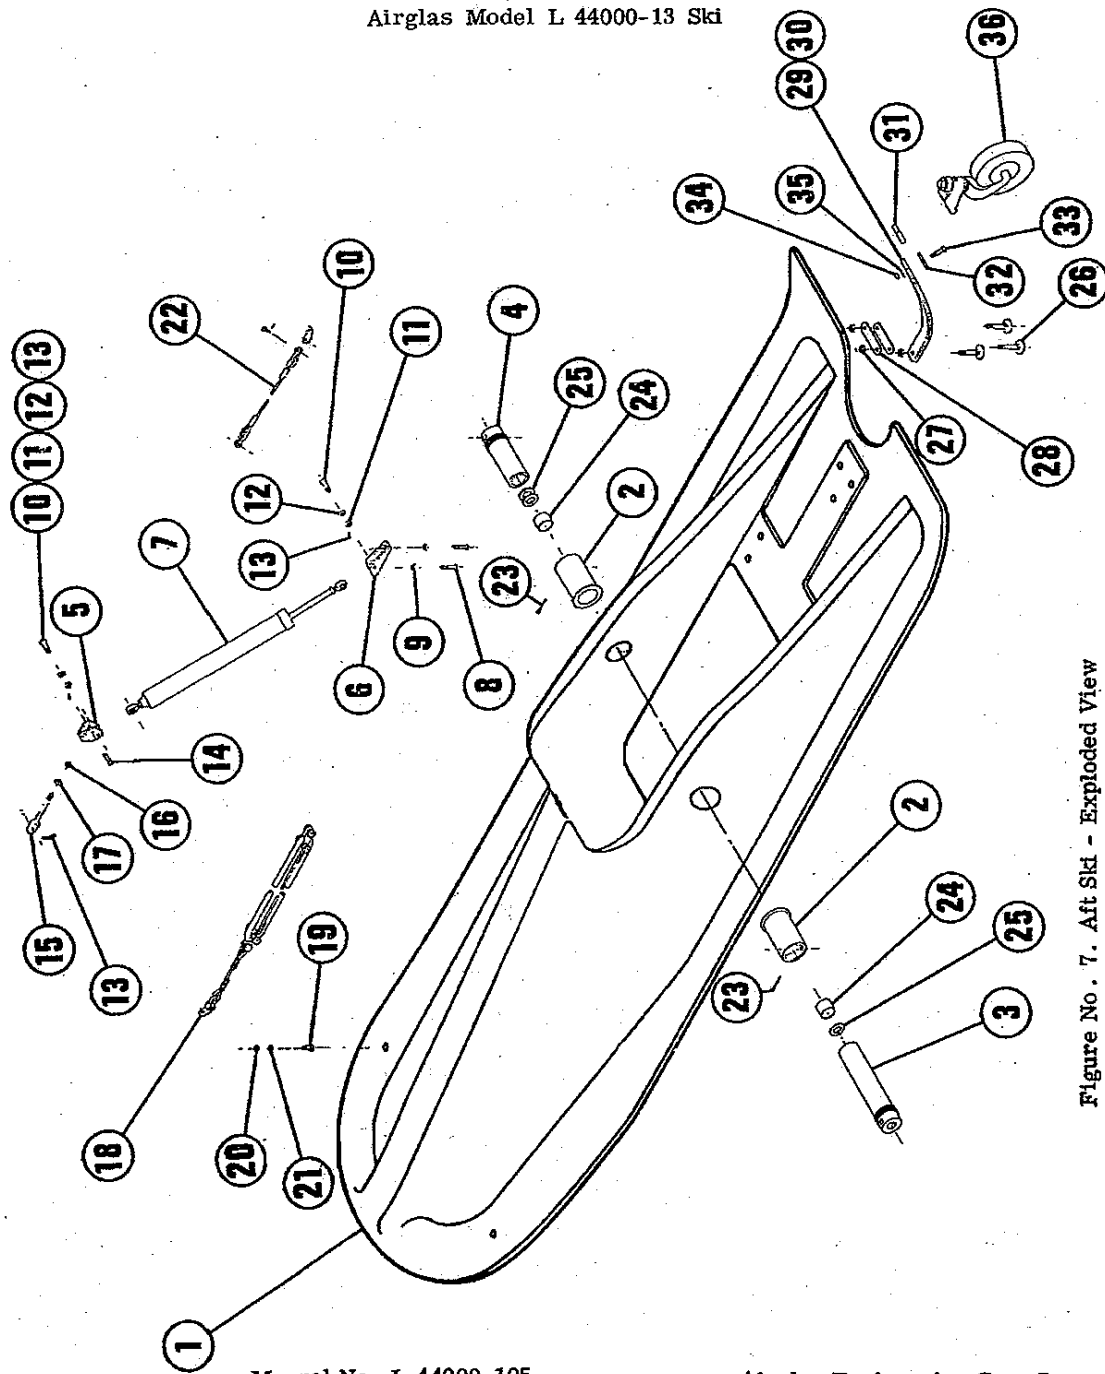


Figure No. 7. Aft Ski - Exploded View

Manual No. L 44000-105

Airglas Engineering Co., Inc.
Anchorage, Alaska 99502

Airglas Model L44000-13 Ski

Fig.No.7

Index Number	Part Number	Code Indent. No.	Nomenclature	Number Required
1	L44000-4	17564	Basic Ski Molding-----	1
2	L44000-11-4	“	Ski Axle Bushing Molded into L44000-4-----	2
3	L44000-13-2	“	Outboard Axle Assy-----	1
4	L44000-13-3	“	Inboard Axle Assy-----	1
5	L44000-13-4	“	Upper Spring Cylinder Mtg. Bracket-----	1
6	L44000-13-5	“	Lower Spring Cylinder Mtg. Bracket-----	1
7	L44000-19	“	Spring Cylinder-----	1
8	AN4-14A		Bolt-----	2
9	AN365-428		Nut-----	2
10	AN26-21		Clevis Bolt-----	2
11	AN320-6		Nut-----	2
12	AN960-616L		Washer-----	2
13	AN380-3-2		Cotter Pin-----	3
14	AN395-17		Clevis Pin-----	1
15	AN47SPL		Eye Bolt-----	1
16	H20-6		Nut-----	1
17	AN960-616		Washer-----	1
18	L44000-13-6	”	Safety Cable and Shock Ring Assembly-----	1
19	AN5-7A		Bolt-----	1
20	AN365-524		Nut-----	1
21	AN960-516		Washer-----	1
22	L44000-13-7	“	Check Cable Assembly-----	1
23	AN380-6-12		Cotter Pin-----	2
24	L44000-11-3-2	“	Bearing-----	2
25	T-1503	70417	Thrust Washer-----	3
26	EB616-20	17564	Bolt-----	3
27	AN363C616		Nut-----	3
28	L44000-11-10	“	Tab-----	2
29	30512-02 or (L20500-D501A-5)	77294	Leaf Spring-----	1
30	30512-04 or (L20500-D501A-6)	“	Leaf Spring-----	1
31	1478	53655	Spacer Assembly-----	1
32	L44000-13-8	17564	Spacer Tail Wheel-----	1
33	AN7-15a		Bolt-----	1
34	AN365-720		Nut-----	1
35	AN960-716		Washer-----	1
36	L44000-3-24B	“	Swivel Tail Wheel Assembly-----	1

Airglas Model L 44000-13 Ski

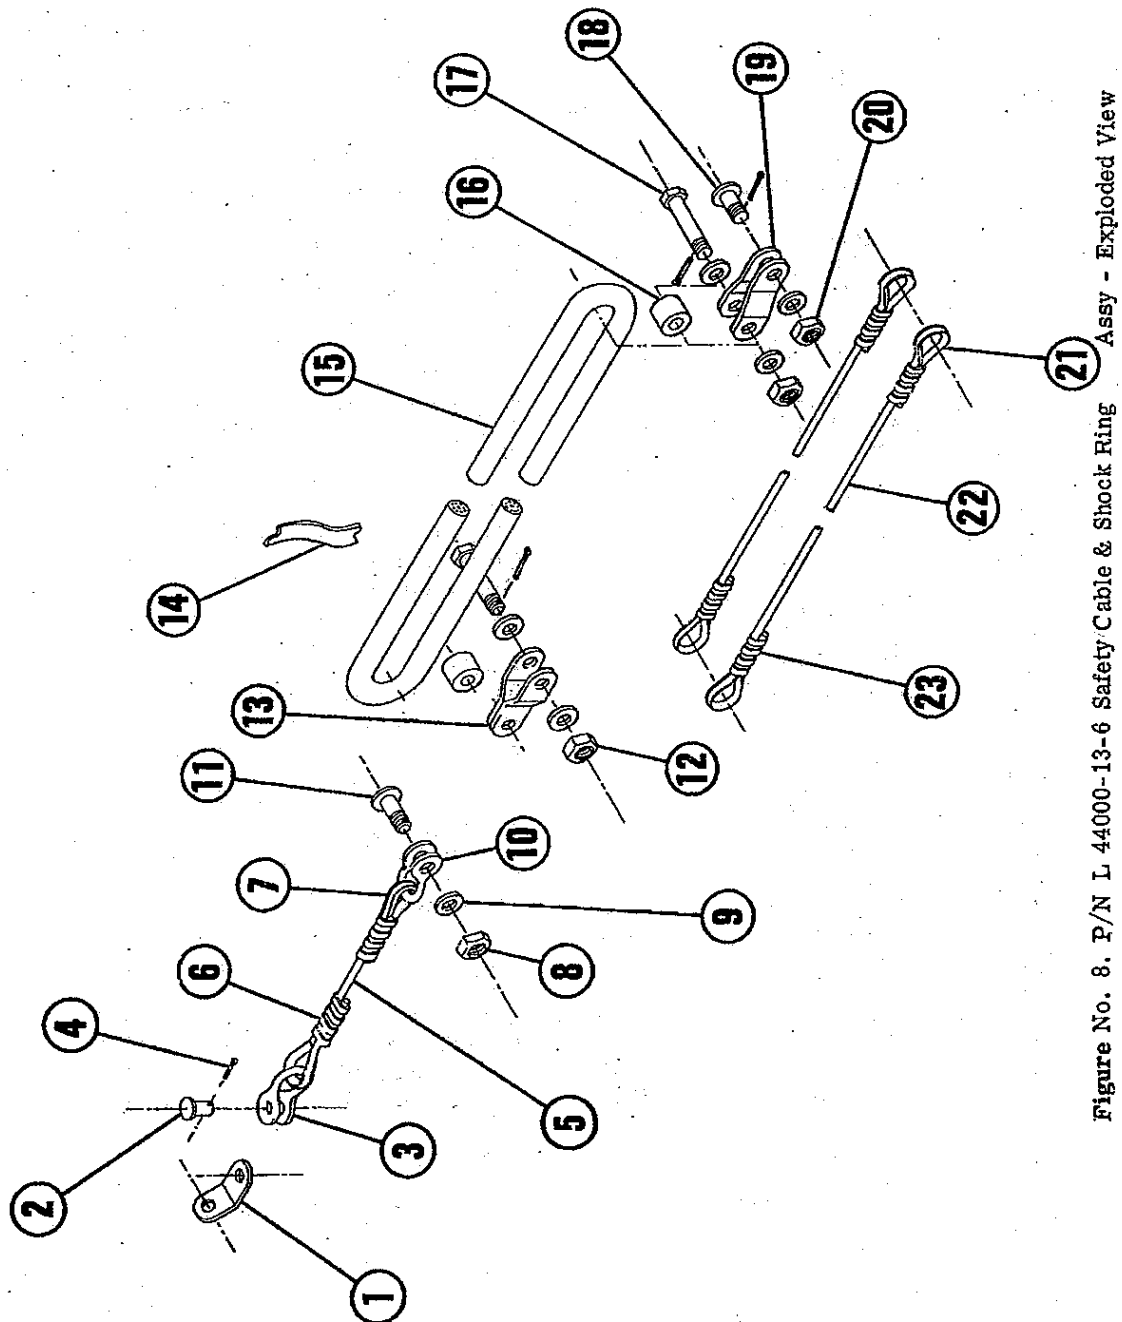


Figure No. 8. P/N L 44000-13-6 Safety Cable & Shock Ring Assy - Exploded View

Manual No. L 44000-105

Airglas Engineering Co., Inc.
Anchorage, Alaska 99502

Airglas Model L44000-13 Ski

Fig.No.8 Index Number	Part Number	Code Indent. No.	Nomenclature	Number Required
1	L44000-11-8-5	17564	Attach Tab-----	1
2	AN395-17		Clevis Pin-----	1
3	AN115-46		Shackle-----	1
4	AN380-3-2		Cotter Pin-----	4
5	L44000-13-6-3	“	Cable-----	1
6	18-6-X	76691	Nicopress-----	2
7	AN100-6		Thimble-----	2
8	AN364-624		Nut-----	1
9	AN960-616L		Washer-----	6
10	AN115-61		Shackle-----	1
11	AN26-15		Clevis Bolt-----	1
12	AN310-6		Nut-----	2
13	L44000-11-8-6	17564	Attach Tab-----	2
14			Tape-----	
15	8020	52504	Shock Ring-----	1
16	L44000-11-8-1	17564	Tube-----	2
17	AN6-16		Bolt-----	2
18	AN26-12		Clevis Bolt-----	1
19	L44000-13-6-2	“	Attach Tab-----	2
20	AN320-6		Nut-----	1
21	AN100-5		Thimble-----	4
22	L44000-13-6-1	“	Cable-----	2

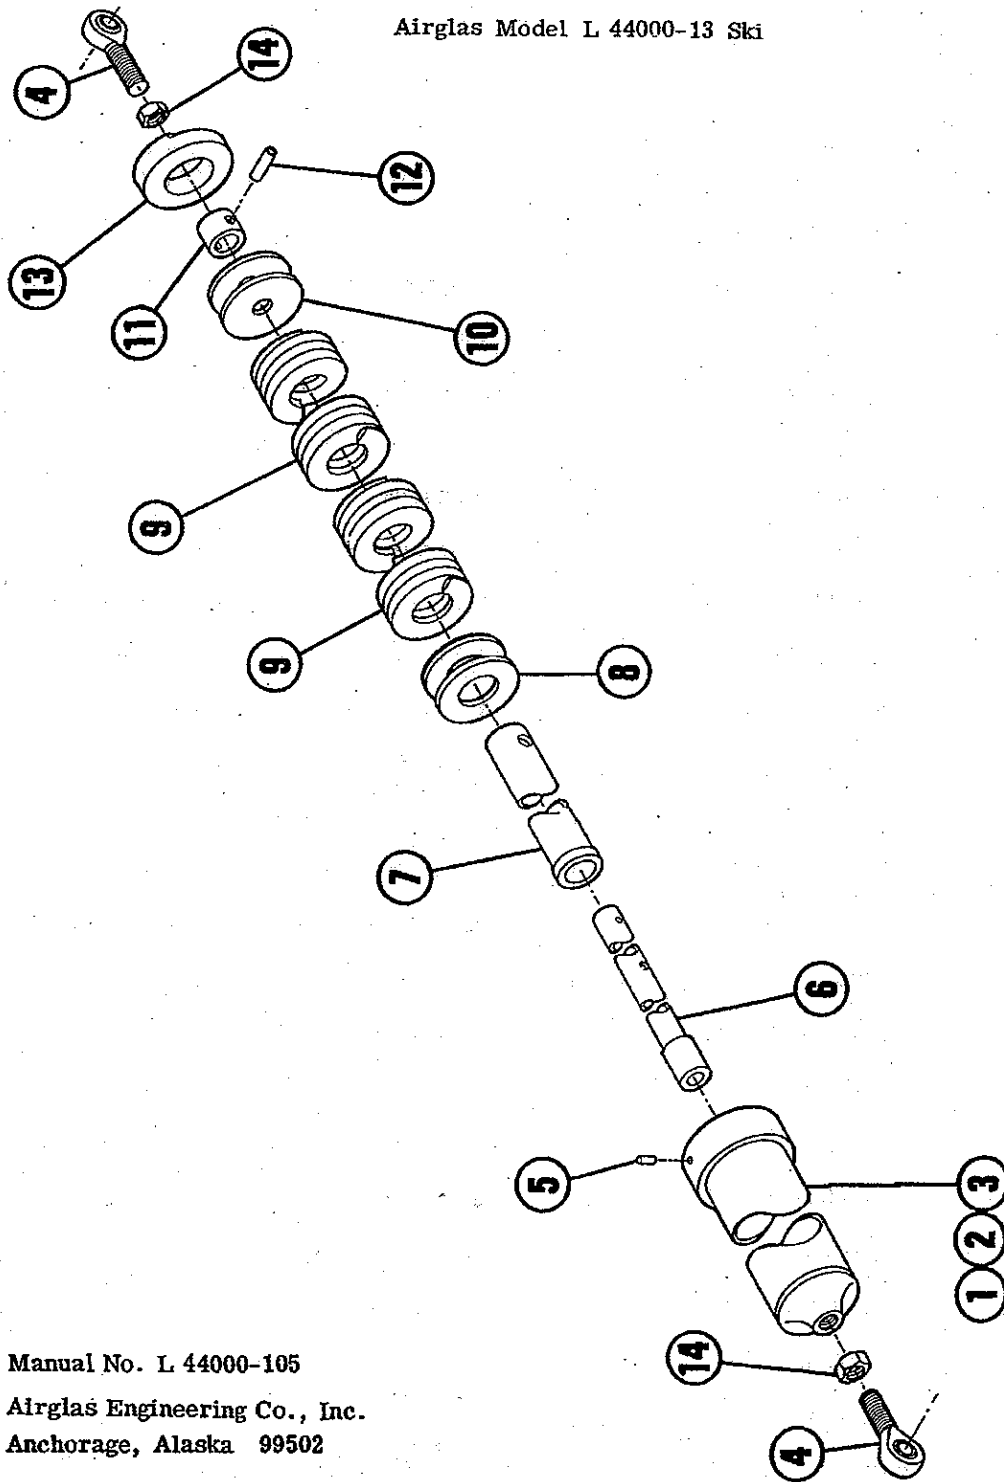


Figure No. 9. P/N L 44000-19 Spring Cylinder Assy Aft. - Exploded View

Airglas Model L44000-13 Ski

Fig.No. 9 Index Number	Part Number	Code Indent.No.	Nomenclature	Number Required
1	L44000-19-1	17564	Tube-----	1
2	L44000-19-4	“	End Fitting-----	1
3	L44000-17-8	“	Tube-----	1
4	HMX-6G	73134	Rod End-----	2
5	MS171522		Spring Pin-----	1
6	L44000-19-3		Tube-----	1
7	L44000-19-2	“	Tube-----	1
8	L44000-17-4	“	Washer-----	2
9	2X8XHD		Spring G/N 3 DWG L44000-19-----	2
10	L44000-17-6	“	Washer-----	2
11	L44000-17-7	“	Tube-----	1
12	MS171652		Spring Pin-----	1
13	L44000-17-9	“	Nut-----	1
14	AN316-7		Nut-----	2

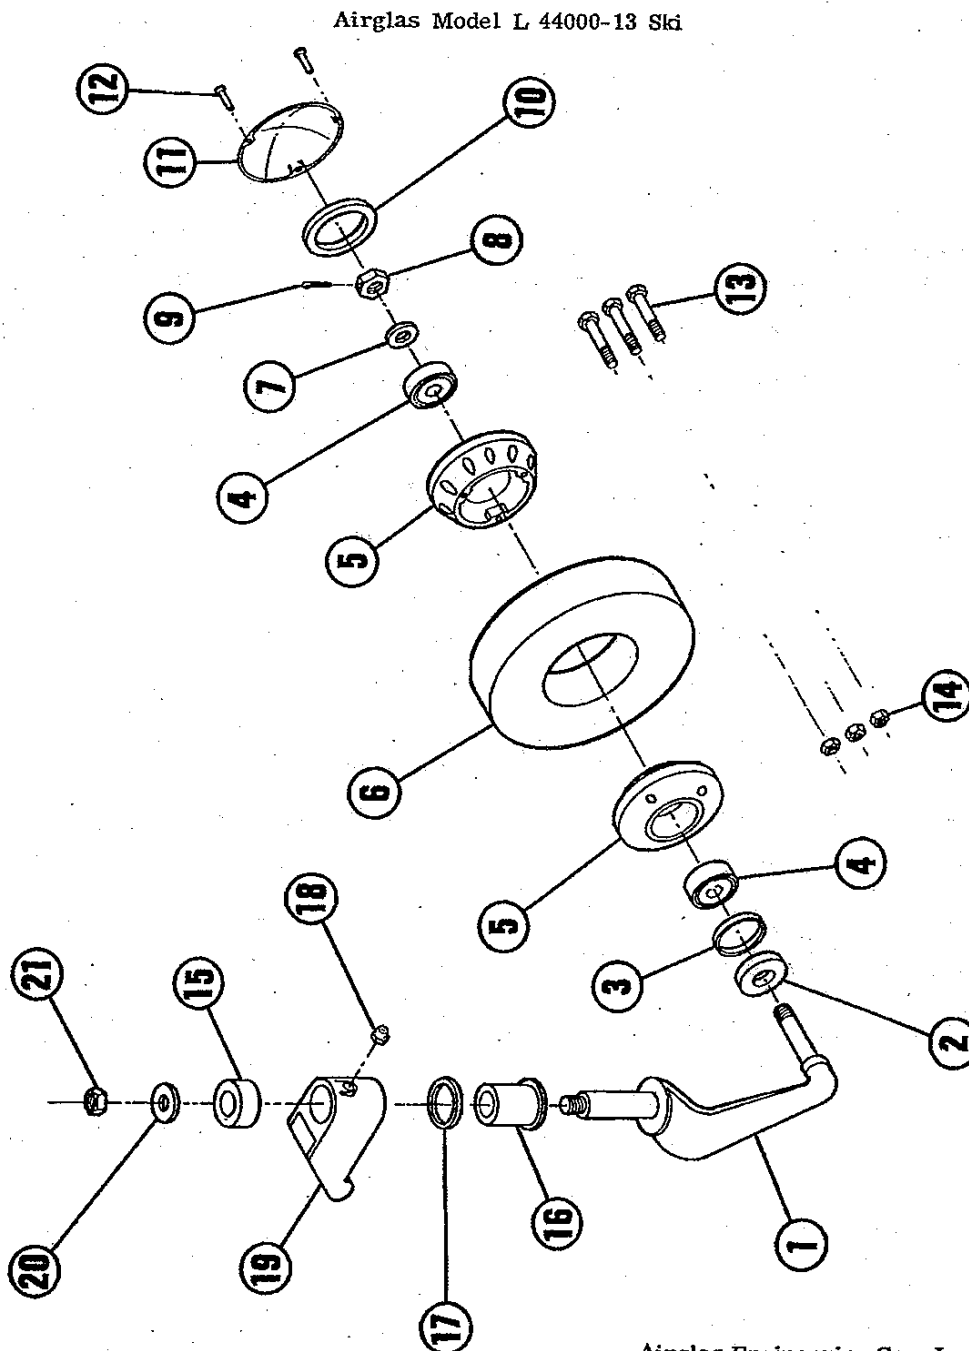


Figure No. 10. P/N L 44000-3-24B Swivel Tail Wheel Assy Aft - Exploded View

6
Airg

Manual No. L 44000-105

Airglas Engineering Co., Inc.
Anchorage, Alaska 99502

Fig.No.10 Index Number	Part Number	Code Indent. No.	Nomenclature	Number Required
1	2078	53655	Fork-----	1
2	1863	“	Grease Retainer-----	1
3	1862	“	Spacer-Grease Retainer-----	1
4	1883	“	Bearing Set-----	2
5	1967	“	Hub Kit-----	2
6	1879	“	Tire-----	1
7	18108	“	Washer-----	1
8	18450	“	Nut-----	1
9	18482	“	Cotter Pin-----	1
10	2035	“	Grease Retainer-----	1
11	1842	“	Cap-Hub-----	1
12	18375	“	Screw-----	3
13	19628	“	Bolt-----	3
14	13293	“	Nut-----	3
15	L44000-3-24B-1	17564	Spacer-----	1
16	1800	53655	Bushing-----	1
17	1781	“	Cap-Bushing-----	1
18	1641	“	Fitting-Grease-----	1
19	2077	“	Bracket Assembly-----	1
20	2346	“	Washer-----	1
21	18470	“	Nut, Self Locking-----	1

REPAIR APPENDIX